 

 


Installation

How to change the battery ?

 


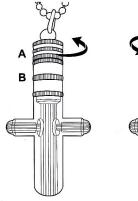



- ① Loosing the part (A)
- 2 Change new batteries (3 pcs x LR41)

в



③ Tightening the part (A)

